

# ACCU-TROL


## Argon/CO<sub>2</sub> Regulator for MIG or TIG Welding



**WESTERN**  
ENTERPRISES

# NEW

The **NEWEST** Product  
for MIG/TIG Welding

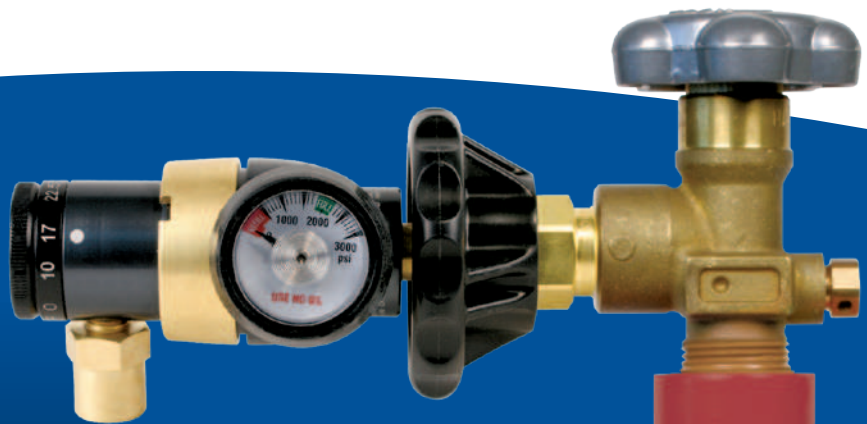

## Efficient and Precise Flow Control

- Click-style selector for just the right flow
- No flow meters to break or keep in the upright position
- Easy-to-use handtight connection  
**NO WRENCH REQUIRED**
- Durable and easy-to-read contents gauge
- 1 Year Warranty



## New Regulator Technology That Saves You Time & Money

### Saves Time:

**Preset Flows** with just one touch of a dial

**Handtight Inlet** allows for easy set-up without a wrench

**Content Gauge** provides for quick check of cylinder contents

### Saves Money:

**Eliminates Fine Tune Adjustments** by setting the exact flow quickly and right the first time


**Economic Style** replaces the need for flowmeter or flowgauge

**Rubber Booted Gauge Protector** reduces costly gauge replacements

### Easy to Operate:

**No Flow Meter** to set up in upright position or ball centering inaccuracies

**Compact and Lightweight** with a diameter of 1.8 x 6.5 and weighing only 22 oz easy enough to carry just about anywhere

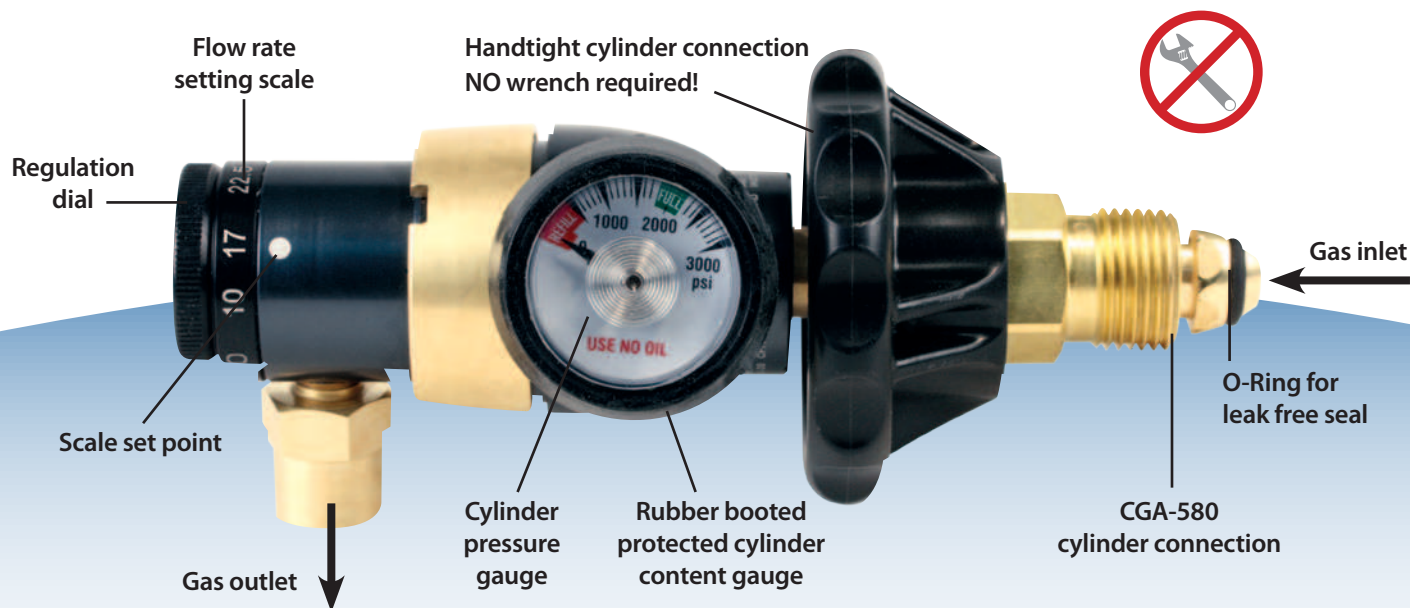

**Western's new Accu-Trol regulator** incorporates a unique flow selector design that helps users set the exact flow quickly and easily. The Accu-Trol regulator will help simplify the MIG/TIG welding process for users of all experience levels.

### Performance Specifications

- Maximum inlet pressure: 3000 psig
- Operating temperature range: 0°F to 120°F (-18°C to 49°C)
- Storage temperature range: -40°F to 140°F (-40°C to 60°C)

### Physical Characteristics

- Dimensions (not including gauge): Diameter 1.8", Length 6.5"
- Inlet filtration: 20 – 40 micron
- Inlet: CGA 580 Handtight nut and nipple
- Outlet: 5/8–18 RHF CGA 032
- Approximate weight(s): 22 oz
- 1½" inlet pressure gauge – range: 0–3000 psig

Model Number	Gas	CGA	Flow Settings (CFH)
ACU-200	CO <sub>2</sub> + Argon*	580	Off, 10, 17, 22.5, 25, 30, 40, 45, 50, 55, 60

\*Flows calibrated for mixture of Ar 75%, CO<sub>2</sub> 25%

**⚠ WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

Distributed By:



**WESTERN  
ENTERPRISES**

Western Enterprises  
875 Bassett Rd • Westlake, OH 44145  
[www.westernenterprises.com](http://www.westernenterprises.com) • (800) 783-7890

B20630 ECN-17925 (1806)